


# A5s

# **Receiving Card**

V2.1.1

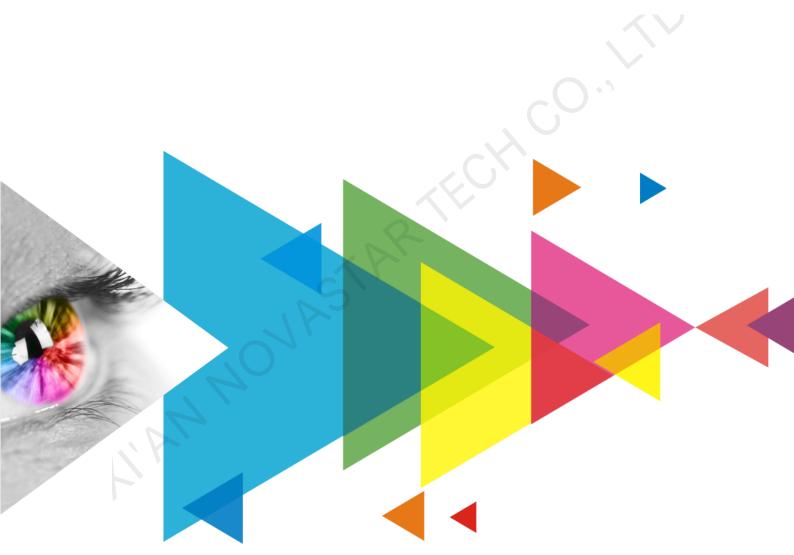

**Specifications** 

# **Change History**

Document Version	Firmware Version	Release Date	Description
V2.1.1	V4.6.1.0	2020-07-01	<ul> <li>Updated the firmware version.</li> <li>Updated the indicator description.</li> <li>Updated the side dimensions diagram.</li> <li>Optimized the feature description.</li> <li>Optimized the pin description tables.</li> </ul>
V2.1.0	V4.6.0.0	2019-09-20	Updated the appearance diagram.
V2.0.0	V4.6.0.0	2019-03-15	Added the following functions:     Expansion to 128 groups of serial data     Individual Gamma adjustment for RGB     Bit error rate monitoring     Optimized the following functions:     Module scanning expanded to 64 scans     Cabinet LCD backlight control and run time resetting     Changed a function name:     Changed the name "quick seam correction" to "quick adjustment of dark or bright lines".
V1.2.0	V4.5.0.0	2018-08-10	Optimized the quick seam correction function.
V1.1.0	N/A	2018-01-25	Support LVDS transmission (supported by dedicated firmware).     Support image rotation in 90° increments.
V1.0.1	N/A	2017-07-27	Optimized the document content and structure.
V1.0.0	N/A	2016-10-25	First release

### Introduction

The A5s is a high-end small receiving card developed by NovaStar. A single A5s loads up 320×256 pixels (8bit), or 256×256 pixels (10bit/12bit). Supporting the pixel level brightness and chroma calibration, individual Gamma adjustment for RGB, and 3D functions, the A5s can greatly improve the display effect and user experience.

The A5s uses high-density connectors for communication to limit the effects of dust and vibration, resulting in high stability. It supports up to 32 groups of parallel RGB data or 64 groups of serial data (expandable to 128 groups of serial data). Its reserved pins allow for custom functions of users. Thanks to its EMC Class B compliant hardware design, the A5s has improved electromagnetic compatibility and is suitable to various on-site setups.

### **Features**

### **Improvements to Display Effect**

- Pixel level brightness and chroma calibration
  Working with NovaLCT and NovaCLB, the
  receiving card supports brightness and chroma
  calibration on each LED, which can effectively
  remove color discrepancies and greatly improve
  LED display brightness and chroma consistency,
  allowing for better image quality.
- Quick adjustment of dark or bright lines
   The dark or bright lines caused by splicing of
   cabinets or modules can be adjusted to improve
   the visual experience. This function is easy to
   use and the adjustment takes effect immediately.
- 3D function
   Working with the independent controller which supports 3D function, the receiving card supports 3D image output.
- Individual Gamma adjustment for RGB
  Working with NovaLCT (V5.2.0 or later) and the
  independent controller which supports this
  function, the receiving card supports individual
  adjustment of red Gamma, green Gamma and
  blue Gamma, which can effectively control
  image non-uniformity under low grayscale and
  white balance offset, allowing for a more realistic
  image.
- Image rotation in 90° increments
   The display image can be set to rotate in multiples of 90° (0°/ 90°/180°/270°).

#### **Improvements to Maintainability**

- Smart module (supported by dedicated firmware)
  Working with the smart module, the receiving
  card supports module ID management, storage
  of calibration coefficients and module
  parameters, monitoring of module temperature,
  voltage and flat cable communication status,
  LED error detection, and recording of the
  module run time.
- Automatic module calibration
   After a new module with flash memory is
   installed to replace the old one, the calibration
   coefficients stored in the flash memory can be
   automatically uploaded to the receiving card
   when it is powered on.
- Module Flash management
   For modules with flash memory, the information stored in the memory can be managed. The calibration coefficients and module ID can be stored and read back.
- One click to apply calibration coefficients stored in module Flash

For modules with flash memory, if the Ethernet cable is disconnected, users can hold down the self-test button on the cabinet to upload the calibration coefficients in the flash memory of the module to the receiving card.

- Mapping function
   The cabinets display the receiving card number and Ethernet port information, allowing users to easily obtain the locations and connection topology of receiving cards.
- Setting of a pre-stored image in receiving card
  The image displayed on the screen during
  startup, or displayed when the Ethernet cable is
  disconnected or there is no video signal can be
  customized.
- Temperature and voltage monitoring
   The temperature and voltage of the receiving card can be monitored without using peripherals.
- Cabinet LCD
   The LCD module connected to the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.
- Bit error rate monitoring
   The Ethernet port communication quality of the receiving card can be monitored and the number of erroneous packets can be recorded to help troubleshoot network communication problems.
- Firmware program readback
   The firmware program of the receiving card can be read back and saved to the local computer.

   NovaLCT V5.2.0 or later is required.

NovaLCT V5.2.0 or later is required.

- Configuration parameter readback
   The configuration parameters of the receiving card can be read back and saved to the local computer.
- LVDS transmission (supported by dedicated firmware)
   Low-voltage differential signaling (LVDS) transmission is used to reduce the number of data cables from the hub board to module, increase the transmission distance, and improve the signal transmission quality and electromagnetic compatibility (EMC).

#### **Improvements to Reliability**

Dual card backup and status monitoring
In an application with requirements for high
reliability, two receiving cards can be mounted
onto a single hub board for backup. In the case
that the main receiving card fails, the backup
card will serve to ensure uninterrupted operation
of the display.

The working status of the main and backup receiving cards can be monitored in NovaLCT V5.2.0 or later.

- Status detection of dual power supplies
   When two power supplies are connected, their working status can be detected by the receiving card.
- Loop backup
  - The receiving cards and the sending card form a loop via the main and backup line connections. If a fault occurs at a location of the lines, the screen can still display the image normally.
- Dual backup of configuration parameters
   The receiving card configuration parameters are
   stored in the application area and factory area of
   the receiving card at the same time. Users
   usually use the configuration parameters in the

- application area. If necessary, users can restore the configuration parameters in the factory area to the application area.
- Dual backup of the application program
   Two copies of the application program are stored in the receiving card at the factory to avoid the problem that the receiving card may get stuck due to program update exception.
- Dual backup of calibration coefficients
   The calibration coefficients are stored in the application area and factory area of the receiving card at the same time. Users usually use the calibration coefficients in the application area. If necessary, users can restore the calibration coefficients in the factory area to the application area.

## **Appearance**

#### Top





#### Bottom



High-Density Connector

All product pictures shown in this document are for illustration purpose only. Actual product may vary.


## **Indicators**

Indicator	Color	Status	Description
Running indicator	Green	Flashing once every 1s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.
		Flashing once every 3s	Ethernet cable connection is abnormal.
		Flashing 3 times every 0.5s	Ethernet cable connection is normal, but no video source input is available.
		Flashing once every 0.2s	The receiving card failed to load the program in the application area and now is using the backup program.

Indicator	Color	Status	Description
		Flashing 8 times every 0.5s	A redundancy switchover occurred on the Ethernet port and the loop backup has taken effect.
Power indicator	Red	Always on	The power input is normal.

### **Dimensions**


The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 8.0 mm. Ground connection (GND) is enabled for mounting holes.

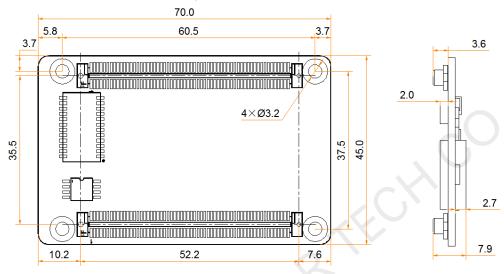

Tolerance: ±0.1 Unit: mm

### **Pins**

### Pins for 32 Groups of Parallel Data

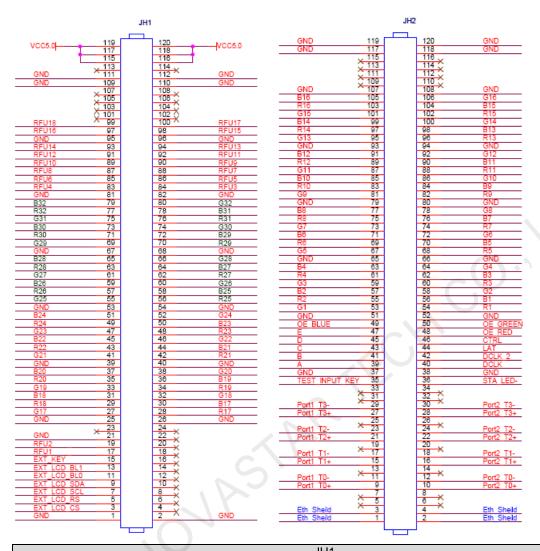

		JH1			
	GND	1	2	GND	
LCD CS signal	EXT_LCD_CS	3	4	NC	
LCD RS signal	EXT_LCD_RS	5	6	NC	
LCD clock signal	EXT_LCD_SCL	7	8	NC	
LCD data signal	EXT_LCD_SDA	9	10	NC	
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC	
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC	
LCD control button	EXT_KEY	15	16	NC	
/	RFU1	17	18	NC	
/	RFU2	19	20	NC	
	GND	21	22	NC	
	NC	23	24	NC	
	GND	25	26	GND	
/	G17	27	28	R17	/
/	R18	29	30	B17	/
/	B18	31	32	G18	/
/	G19	33	34	R19	/
/	R20	35	36	B19	/
/	B20	37	38	G20	/
	GND	39	40	GND	
/	G21	41	42	R21	/
/	R22	43	44	B21	/
/	B22	45	46	G22	/


		JH1			
/	G23	47	48	R23	/
/	R24	49	50	B23	/
/	B24	51	52	G24	/
	GND	53	54	GND	
/	G25	55	56	R25	/
/	R26	57	58	B25	/
/	B26	59	60	G26	/
/	G27	61	62	R27	/
/	R28	63	64	B27	/
/	B28	65	66	G28	/
	GND	67	68	GND	
/	G29	69	70	R29	/
/	R30	71	72	B29	/
/	B30	73	74	G30	/
/	G31	75	76	R31	/
/	R32	77	78	B31	/
/	B32	79	80	G32	/
	GND	81	82	GND	
/	RFU4	83	84	RFU3	/
/	RFU6	85	86	RFU5	1
/	RFU8	87	88	RFU7	/
/	RFU10	89	90	RFU9	/
/	RFU12	91	92	RFU11	/
/	RFU14	93	94	RFU13	/
	GND	95	96	GND	
/	RFU16	97	98	RFU15	/
/	RFU18	99	100	RFU17	/
	NC	101	102	NC	
	NC	103	104	NC	
	NC	105	106	NC	
	NC	107	108	NC	
	GND	109	110	GND	
	GND	111	112	GND	
	NC	113	114	NC	
	VCC	115	116	VCC	
	VCC	117	118	VCC	
	VCC	119	120	VCC	

		Jŀ	12		
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground
	NC	5	6	NC	
	NC	7	8	NC	
	Port1_T0+	9	10	Port2_T0+	
	Port1_T0-	11	12	Port2_T0-	
	NC	13	14	NC	
	Port1_T1+	15	16	Port2_T1+	
	Port1_T1-	17	18	Port2_T1-	
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port
	Port1_T2+	21	22	Port2_T2+	
	Port1_T2-	23	24	Port2_T2-	
	NC	25	26	NC	
	Port1_T3+	27	28	Port2_T3+	
	Port1_T3-	29	30	Port2_T3-	
	NC	31	32	NC	
	NC	33	34	NC	
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)
	GND	37	38	GND	
Line decoding signal	A	39	40	DCLK	Shift clock output 1
Line decoding signal	В	41	42	DCLK_2	Shift clock output 2
Line decoding signal	С	43	44	LAT	Latch signal output
Line decoding signal	D	45	46	CTRL	Afterglow control signal
Line decoding signal	Е	47	48	OE_RED	Display enable
Display enable	OE_BLUE	49	50	OE_GREEN	Display enable

www.novastar.tech

	JH2					
	GND	51	52	GND		
/	G1	53	54	R1	/	
/	R2	55	56	B1	/	
/	B2	57	58	G2	/	
/	G3	59	60	R3	/	
1	R4	61	62	B3	/	
/	B4	63	64	G4	/	
/	GND	65	66	GND	/	
/	G5	67	68	R5	/	
/	R6	69	70	B5	/	
/	B6	71	72	G6	/	
/	G7	73	74	R7	/	
/	R8	75	76	B7	/	
1	B8	77	78	G8	/	
7	GND	79	80	GND	/	
1	GND G9	81	82	R9	1	
/	R10	83	84	B9	/	
/	B10	85	86	G10		
/	G11	87	88	R11	/	
/	R12	89	90	B11	<u>'</u>	
/	B12		90	G12	1	
/	GND	91		GND	, ,	
		93	94		,	
/	G13 R14	95 97	96 98	R13 B13	/	
/					/	
	B14	99	100	G14	/	
/	G15	101	102	R15	/	
	R16	103	104	B15	/	
/	B16	105	106	G16	/	
	GND	107	108	GND		
	NC	109	110	NC NC		
	NC	111	112	NC NC		
	NC NC	113	114	NC NC		
		115	116			
	GND GND	117	118 120	GND GND		

### Pins for 64 Groups of Serial Data

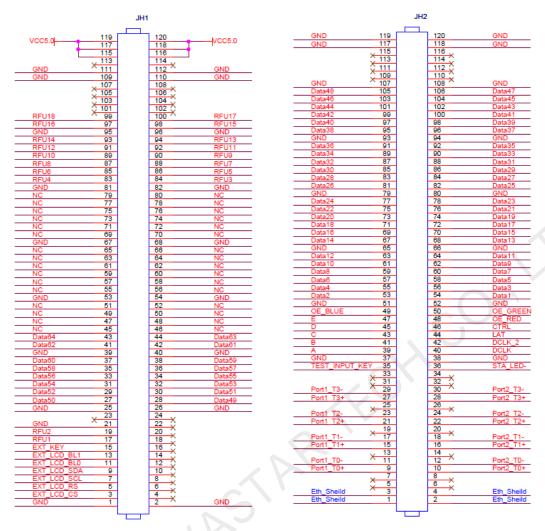

JH1					
	GND	1	2	GND	
LCD CS signal	EXT_LCD_CS	3	4	NC	
LCD RS signal	EXT_LCD_RS	5	6	NC	
LCD clock signal	EXT_LCD_SCL	7	8	NC	
LCD data signal	EXT_LCD_SDA	9	10	NC	
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC	
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC	
LCD control button	EXT_KEY	15	16	NC	
	RFU1	17	18	NC	
/	RFU2	19	20	NC	
	GND	21	22	NC	
	NC	23	24	NC	
	GND	25	26	GND	
/	Data50	27	28	Data49	/
/	Data52	29	30	Data51	/
/	Data54	31	32	Data53	/
/	Data56	33	34	Data55	/
/	Data58	35	36	Data57	/
/	Data60	37	38	Data59	/
	GND	39	40	GND	
/	Data62	41	42	Data61	/
/	Data64	43	44	Data63	/
	NC	45	46	NC	
	NC	47	48	NC	
	NC	49	50	NC	
	NC	51	52	NC	
	GND	53	54	GND	

	JH1					
	NC	55	56	NC		
	NC	57	58	NC		
	NC	59	60	NC		
	NC	61	62	NC		
	NC	63	64	NC		
	NC	65	66	NC		
	GND	67	68	GND		
	NC	69	70	NC		
	NC	71	72	NC		
	NC	73	74	NC		
	NC	75	76	NC		
	NC	77	78	NC		
	NC	79	80	NC		
	GND	81	82	GND		
/	RFU4	83	84	RFU3	/	
/	RFU6	85	86	RFU5	/	
/	RFU8	87	88	RFU7	_/ _	
/	RFU10	89	90	RFU9	1	
/	RFU12	91	92	RFU11	/	
/	RFU14	93	94	RFU13	1	
	GND	95	96	GND		
/	RFU16	97	98	RFU15	1	
/	RFU18	99	100	RFU17	/	
	NC	101	102	NC		
	NC	103	104	NC		
	NC	105	106	NC		
	NC	107	108	NC		
	GND	109	110	GND		
	GND	111	112	GND		
	NC	113	114	NC		
	VCC	115	116	VCC		
	VCC	117	118	VCC		
	VCC	119	120	VCC		

	VCC	119	120	VCC		
	JH2					
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground	
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground	
	NC	5	6	NC		
	NC	7	8	NC		
	Port1_T0+	9	10	Port2_T0+		
	Port1_T0-	11	12	Port2_T0-		
	NC	13	14	NC		
	Port1_T1+	15	16	Port2_T1+		
	Port1_T1-	17	18	Port2_T1-		
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port	
	Port1_T2+	21	22	Port2_T2+		
	Port1_T2-	23	24	Port2_T2-		
	NC	25	26	NC		
	Port1_T3+	27	28	Port2_T3+		
	Port1_T3-	29	30	Port2_T3-		
	NC	31	32	NC		
	NC	33	34	NC		
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)	
	GND	37	38	GND		
Line decoding signal	A	39	40	DCLK	Shift clock output 1	
Line decoding signal	В	41	42	DCLK_2	Shift clock output 2	
Line decoding signal	С	43	44	LAT	Latch signal output	
Line decoding signal	D	45	46	CTRL	Afterglow control signal	
Line decoding signal	Е	47	48	OE_RED	Display enable	
Display enable	OE_BLUE	49	50	OE_GREEN	Display enable	
	GND	51	52	GND		
/	Data2	53	54	Data1	/	
	Data4	55	56	Data3	1	
/	Data6	57	58	Data5	/	

www.novastar.tech 9

		JH2	<u> </u>		
/	Data8	59	60	Data7	/
1	Data10	61	62	Data9	/
1	Data12	63	64	Data11	/
	GND	65	66	GND	
1	Data14	67	68	Data13	/
1	Data16	69	70	Data15	/
/	Data18	71	72	Data17	/
1	Data20	73	74	Data19	/
1	Data22	75	76	Data21	/
1	Data24	77	78	Data23	/
	GND	79	80	GND	
1	Data26	81	82	Data25	/
/	Data28	83	84	Data27	/
1	Data30	85	86	Data29	/
1	Data32	87	88	Data31	/
1	Data34	89	90	Data33	/
1	Data36	91	92	Data35	_/
	GND	93	94	GND	
1	Data38	95	96	Data37	/
1	Data40	97	98	Data39	1
1	Data42	99	100	Data41	/
1	Data44	101	102	Data43	1
/	Data46	103	104	Data45	/
/	Data48	105	106	Data47	/
	GND	107	108	GND	
	NC	109	110	NC	
	NC	111	112	NC	
	NC	113	114	NC	
	NC	115	116	NC	
	GND	117	118	GND	
	GND	119	120	GND	



The recommended VCC power input is 5.0 V.

OE\_RED, OE\_GREEN and OE\_BLUE are display enable pins. When RGB are not controlled separately, use OE\_RED. When the PWM chip is used, those pins are used as GCLK pins.

In the mode of 128 groups of serial data, Data65–Data128 use the data of Data1–Data64, respectively.

### **Reference Design for Extended Functions**

	Pins for Extended Functions						
Pin	Recommended Smart Module Pin	Recommended Module Flash Pin	Description				
RFU1	Reserved	Reserved	A reserved pin for connection to MCU				
RFU2	Reserved	Reserved	A reserved pin for connection to MCU				
RFU3	HUB_CODE0	HUB_CODE0	Flash control pin 1				
RFU4	HUB_SPI_CLK	HUB_SPI_CLK	Clock signal of serial pin				
RFU5	HUB_CODE1	HUB_CODE1	Flash control pin 2				
RFU6	HUB_SPI_CS	HUB_SPI_CS	CS signal of serial pin				
RFU7	HUB_CODE2	HUB_CODE2	Flash control pin 3				
RFU8	/	HUB_SPI_MOSI	Module Flash data storage input				
KFU6	HUB_UART_TX	/	Smart module TX signal				
RFU9	HUB_CODE3	HUB_CODE3	Flash control pin 4				
RFU10	/	HUB_SPI_MISO	Module Flash data storage output				
KFUIU	HUB_UART_RX	/	Smart module RX signal				
RFU11	HUB_H164_CSD	HUB_H164_CSD	74HC164 data signal				
RFU12	/	/	1				
RFU13	HUB_H164_CLK	HUB_H164_CLK	74HC164 clock signal				
RFU14	POWER_STA1	POWER_STA1	Dual power supply detection signal 1				
RFU15	MS_DATA	MS_DATA	Dual card backup connection signal				
RFU16	POWER_STA2	POWER_STA2	Dual power supply detection signal 2				
RFU17	MS_ID	MS_ID	Dual card backup identifier signal				
RFU18	HUB_CODE4	HUB_CODE4	Flash control pin 5				

www.novastar.tech



The RFU8 and RFU10 are signal multiplex extension pins. Only one pin from either the Recommended Smart Module Pin or the Recommended Module Flash Pin can be selected at the same time.

# **Specifications**

Maximum Loading Capacity	320×256 pixels (8bit) 256×256 pixels (10bit/12bit)	
Electrical Parameters	Input voltage	DC 3.3 V to 5.5 V
	Rated current	0.5 A
	Rated power consumption	2.5 W
Operating Environment	Temperature	-20°C to +70°C
	Humidity	10% RH to 90% RH, non-condensing
Storage Environment	Temperature	-25°C to +125°C
	Humidity	0% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	70.0 mm × 45.0 mm × 7.9 mm
	Net weight	17.3 g
Packing Information	Packing specifications	An antistatic bag and anti-collision foam are provided for each receiving card. Each packing box contains 40 receiving cards.
	Packing box dimensions	378.0 mm × 190.0 mm × 120.0 mm
Certifications	RoHS, EMC Class B	

#### Copyright © 2020 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

#### **Trademark**

NOVA) 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

#### Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.