

INSTALLATION INSTRUCTIONS



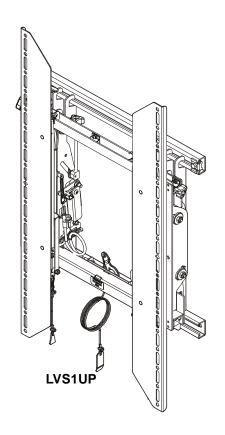

ConnexSys™ Portrait Video Wall Mounting System

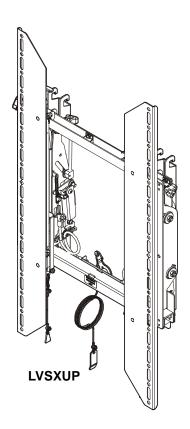

LVS1UP / LVSXUP

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief®, ConnexSys™, RapidDraw™, and PowerZone™ are trademarks of Milestone AV Technologies. All rights reserved.



IMPORTANT SAFETY INSTRUCTIONS

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the

WARNING: Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



component.

WARNING: Never operate this mounting system if it is damaged. Return the mounting system to a service center for examination and repair.

WARNING: Do not use this product outdoors.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the LVS1UP/LVSXUP does not exceed maximum weights listed in table below.

MODEL	Maximum Weight Allowed
LVS1UP	150 lbs (68.0 kg)
LVSXUP	150 lbs (68.0 kg)

IMPORTANT!: The video wall system ships either with rails (LVS1UP) or without (LVSXUP). If you're installing a video wall of LVSXUP mounts you will need to provide the strut channel for mounting to the wall. (See LET'S GET STARTED! **Measurements You'll Need** section for further information.)

IMPORTANT!: The LVS1UP/LVSXUP is designed to be mounted to:

- a bare 8" thick solid concrete wall. Fasteners must be placed a minimum of 16" (406mm) and a maximum of 24" (610mm) apart AND within 4" (102mm) of each end of the rail/strut channel.
- a 5/8" minimum thickness plywood-backed, steel stud wall covered with drywall having a maximum thickness of 5/8". Five fasteners must be evenly spaced in the top rail/strut channel along the width of the display with at least 3-1/2" (89mm) spacing between each fastener AND within 3-1/2" (89mm) from each end of rail/strut channel. Repeat to secure bottom rail/strut channel.
- a 2" x 4" wood stud wall covered with drywall having a maximum thickness of 5/8". Fasteners must be placed a minimum of 16" (406mm) and a maximum of 24" (610mm) apart AND within 4" (102mm) of each end of the rail/strut channel.

--SAVE THESE INSTRUCTIONS--


TABLE OF CONTENTS


IMPORTANT SAFETY INSTRUCTIONS2	
TABLE OF CONTENTS3	
LEGEND4	
DIMENSIONS5	
TOOLS REQUIRED FOR INSTALLATION6	
PARTS6	
LET'S GET STARTED! Measurements You'll Need7	
STRUT CHANNEL REQUIREMENTS (LVSXUP)8	
MOUNTING PATTERN OFFSET CALCULATION8	
ATTACHING STRUT CHANNEL OR RAIL9	
HANGING LVS1UP/LVSXUP MOUNT ON RAIL/STRUT CHANNEL	10
Preparing Strut Channel (LVSXUP only)10	
Hanging Mounts10	
INSTALLING INTERFACE BRACKETS11	
ADDING DISPLAYS TO MOUNTS11	
ADJUSTMENTS12	
COMPLETING THE INSTALLATION14	
Cable Management Clips14	
Security14	
SERVICE14	
Extending and Retracting Mount14	
Interface Bracket Kickstands14	
RapidDraw Display Release15	
FASTENER INSTALLATION METHODS15	
Wood Stud15	
Concrete15	
Plywood-Backed Steel Stud16	

LEGEND


	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
(*	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
*	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
(A)	Chave de fendas Phillips	Ajustar
W	Cacciavite a stella	Regolare
A	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Open-Ended Wrench	Remove
	Llave de boca	Quitar
6/1	Gabelschlüssel	Entfernen
0	Chave de bocas	Remover
	Chiave a punte aperte	Rimuovere
	Steeksleutel	Verwijderen
	Clé à fourche	Retirez
	By Hand	Optional
	A mano	Opcional
	Von Hand	Optional
	Com a mão	Opcional
	A mano	Opzionale
	Met de hand	Optie
	À la main	En option
	Hex-Head Wrench	Security Wrench
	Llave de cabeza hexagonal	Llave de seguridad
	Sechskantschlüssel	Sicherheitsschlüssel
	Chave de cabeça sextavada	Chave de segurança
	Chiave esagonale	Chiave di sicurezza
	Zeskantsleutel	Veiligheidssleutel
	Clé à tête hexagonale	Clé de sécurité
	3.5 2.5.5.3.3.3.3.3.3.3.3.3.3.3.3.3.3.3.3.3.	5.5 40 000

DIMENSIONS

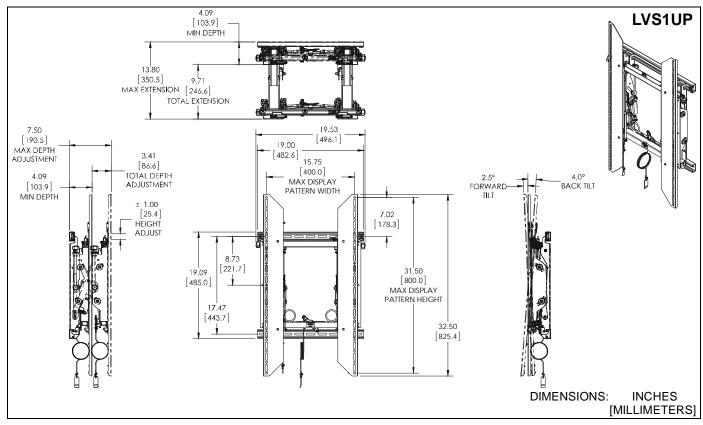


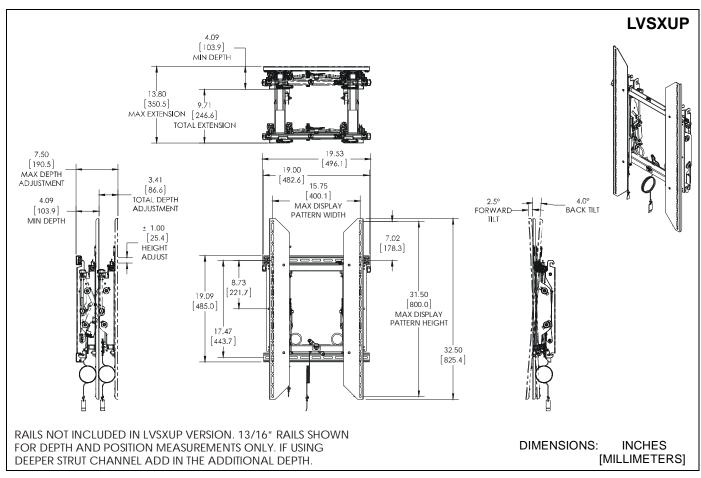

TOOLS REQUIRED FOR INSTALLATION

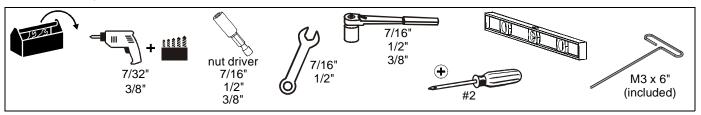

PARTS

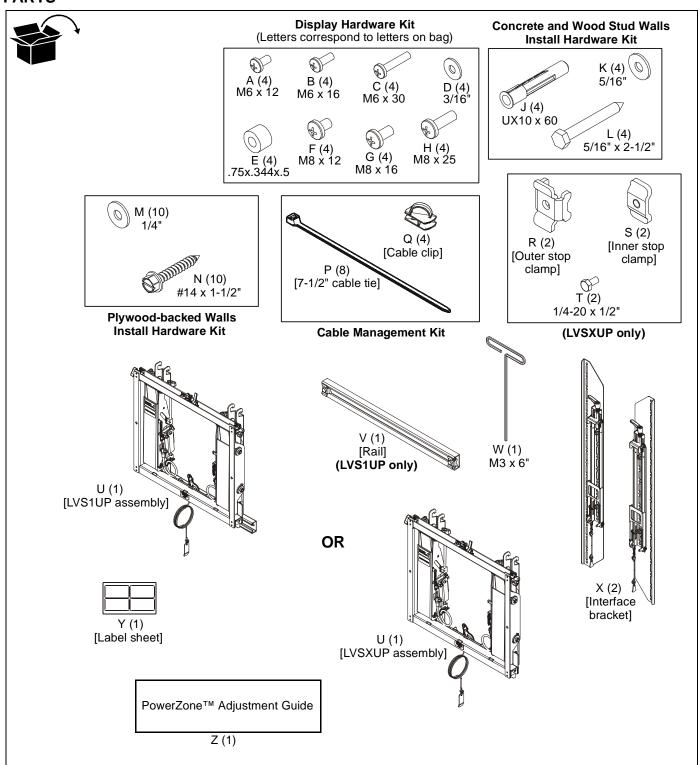

LET'S GET STARTED! Measurements You'll Need

Description	Measurement
A - Number of displays in each row	
B - Number of displays in each column	
C - Width of individual display	
D - Height of individual display	
E - Total width - (A) x (C)	
F - Floor to bottom of display (bottom row) OR Ceiling to top of display (top row)	
G - 1/2 height of display (D) / 2	
H - Display mounting pattern offset. (Only applies to some displays. Calculation instructions on next page.)	
I - Strut channel length* (E) – 4" (102mm) (LVSXUP only)	
J - Number of strut channel lengths (B) x 2 (LVSXUP only)	

^{*} Check with your local strut channel dealer to determine the lengths available. You may need to buy multiple pieces or cut longer pieces down to size.

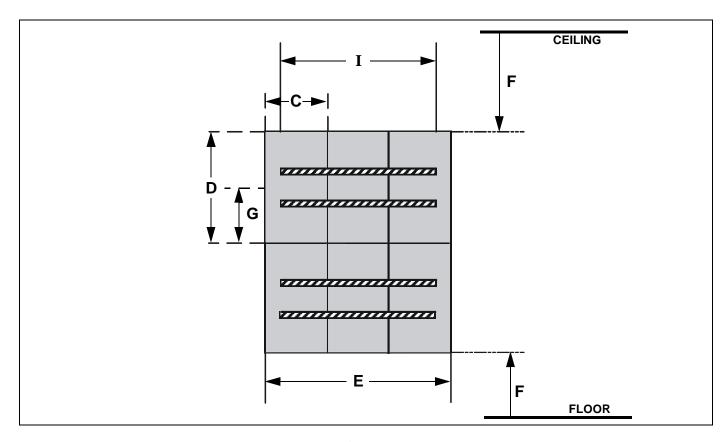


Figure 1

STRUT CHANNEL REQUIREMENTS (LVSXUP)

IMPORTANT!: Strut channel **must** be made of steel with a minimum yield strength of 33ksi (230MPa), and meeting the profile and dimension requirements outlined.

Table 1: Strut Channel Dimension Requirements

STEEL THICKNESS	DIMENSION (See Figure 2)
14 ga [0.075"] (2.5mm)	K = 13/16" (21mm)
12 ga [0.104"] (3mm)	13/16" (21mm) ≤ K ≤ 3-1/4" (83mm)
14 ga or 12 ga	L (minimum) = 1/4" (6mm) L (maximum) = 9/32" (7mm)

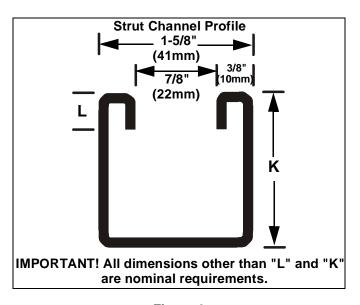


Figure 2


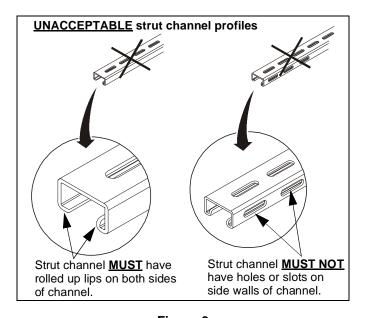


Figure 3

MOUNTING PATTERN OFFSET CALCULATION

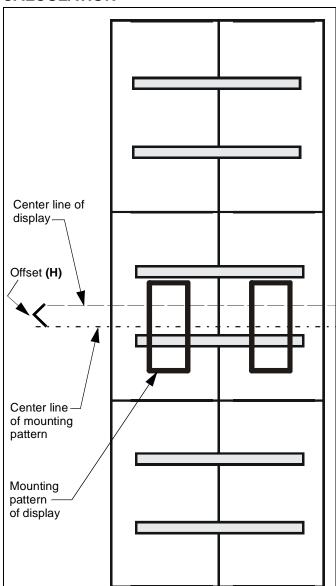

NOTE: An **offset measurement (H)** is required if the centerline of the display does not match the centerline of the display mounting pattern.

1. If display mounting pattern is **BELOW** display centerline:

8-3/4" - H =

Distance from display centerline to rail/strut channel mounting location

2. If display mounting pattern is **ABOVE** display centerline:

8-3/4" + H =

Distance from display centerline to rail/strut channel mounting location

Figure 4

ATTACHING STRUT CHANNEL OR RAIL

IMPORTANT!: Reference measurements noted on page 7.

- Mark distance (F) from floor to desired location for bottom of display OR from ceiling to desired location for top of display (if installing top row first). (See Figure 1) and (See Figure 5)
- Mark distance (G) from bottom of display (or top of display) to center line of display. (See Figure 1) and (See Figure 5)
- Measure up 8-3/4" (222mm) from centerline of display and mark location for top strut channel/rail attachment.

NOTE: If an offset measurement (H) is needed (See Figure):

- If display mounting pattern is BELOW display centerline, measure up: 8-3/4" (222mm) - H
- If display mounting pattern is ABOVE display centerline, measure up: 8-3/4" (222mm) + H
- Level and attach strut channel/rail (V) using the provided hardware. See Parts drawing, (See Figure 5) and (See Table 2).
- Mark distance (D) (up or down) from first strut channel/rail slots and mark location of next row of strut channel/rail.
- Repeat for remaining rows of strut channels/rails.
- (LVSXUP only) Proceed to Hanging LVS1UP/LVSXUP Mount On Rail/Strut Channel section.
- (LVS1UP only) Measure over (C) (width of display) from center of first installed rail, level and mark location of adjacent rail. (See Figure 1) and (See Figure 5)
- 9. Repeat Step 8 for remaining rails in that row.
- Attach upper rails (V) using Fastener Information. (See Table 2)

- 11. Measure up from attached rails the distance (D) and mark for next row of rails (V). (See Figure 1) and (See Figure 5)
- 12. Repeat Steps 4 10 for that row of rails.
- 13. Repeat Step 11 for any remaining rows of rails (V).

IMPORTANT!: See **Fastener Installation Methods** section at end of Installation Instructions for details on installing product into various wall types.

Table 2: Fastener Information

WALL TYPE	PILOT HOLE	FASTENERS (see PARTS drawing)
Drywall attached to plywood- backed walls /Steel studs	N/A	#14 x 1-1/2" hex slot head screw (N) & 1/4" washer (M). 5 fasteners must be evenly spaced in the top rail/ strut channel along the width of the display with at least 3-1/2" (89mm) spacing between each fastener AND within 3-1/2" (89mm) from each end of rail/strut channel. Repeat for lower rail/strut channel.
Wood stud (2" x 4")	7/32" x 3"	5/16 x 2-1/2" hex head lag (L) & 5/16" washer (K). Fasteners placed at stud locations, min. 16" (400mm) and max. 24" (610mm) AND within 4" (102mm) of each end of the rail/strut channel.
Concrete	3/8" x 3"	5/16 x 2-1/2" hex head lag (L) & Fischer UX10x60 anchor (J). Fasteners placed a min. 16" (400mm) and max. 24" (610mm) apart AND within 4" (102mm) of each end of the rail/strut channel.

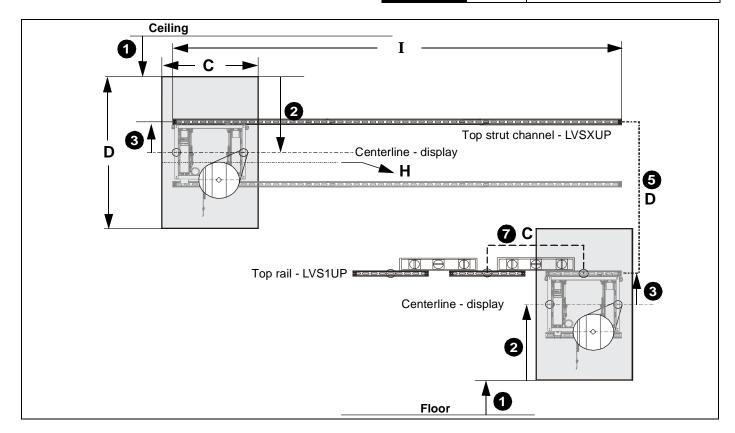


Figure 5

HANGING LVS1UP/LVSXUP MOUNT ON RAIL/ STRUT CHANNEL

Preparing Strut Channel (LVSXUP only)

- On the top rail, slide one inner stop clamp (S) into end of strut channel section. (See Figure 6)
- Fasten outer stop clamp (R) to inner stop clamp (S) using one 1/4-20 x 1/2" hex head screw (T). (See Figure 6)
- 3. Repeat for each end of each top section of strut channel.

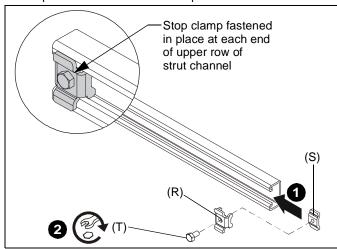


Figure 6

Hanging Mounts

 Lift mount and hang it on lower lip of upper strut channel or rail (V). (See Figure 7)

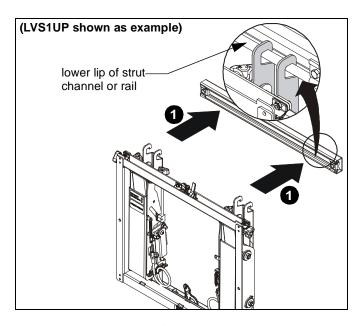


Figure 7

- 2. Repeat for remaining mounts in that row, and slide mounts along rails/strut channels to desired location.
- LVSXUP only: Add lower strut channel to bottom of all mounts in row by lifting strut channel up from below mounts and setting upper lip of strut channel onto mounts' latching hooks. (See Figure 8)

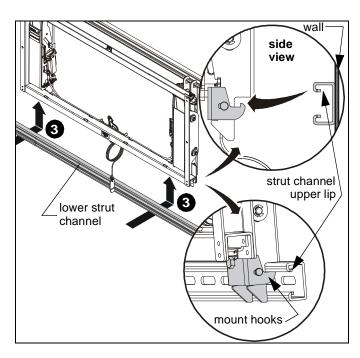


Figure 8

 Tighten two hex head fasteners at bottom of each mount. (See Figure 8)

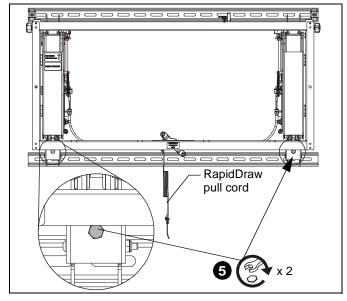


Figure 9

- Fasten bottom rail (LVS1UP) or lower strut channel (LVSXUP) to wall using the provided hardware. See Parts drawing, and (See Table 2).
- Extend RapidDraw pull cord to bottom row of displays so that it is accessible, re-tie to correct length and label the pull cord using label (Y) so that it is identifiable. (See Figure 9)

IMPORTANT!: See **Service** section for more information on properly configurating the RapidDraw cord and display release.

 Repeat Attaching Strut Channel or Rail and Hanging LVS1UP/LVSXUP Mount On Rail/Strut Channel sections for each row of displays.

INSTALLING INTERFACE BRACKETS

Place displays face down on a soft, non-abrasive surface.



CAUTION: Using screws of improper diameter may damage your display! Proper screws will easily thread into display mounting holes.

- Select screw diameter by examining hardware (A-C and F-H) (6mm or 8mm) and comparing with mounting holes on display. (See Figure 10)
- 3. Select spacers:
 - Spacers are <u>NOT</u> required if mounting holes are not recessed and interface brackets (X) can lay flat against display.
 - Spacers (E) <u>ARE</u> required if mounting holes are recessed, or if protrusions prevent interface brackets (X) from laying flat.



CAUTION: Using screws of improper length may damage your display! Proper screws will have adequate thread engagement without contacting bottom of display mounting holes.

- 4. Select screw length: (See Figure 10)
 - By hand, insert SHORTEST length screw of selected diameter (A or F) through 3/16" washer (D, if using screw A), bracket (X), selected spacer (E, if required), into display mounting hole. Do NOT thread screw into hole at this time.
 - Proper screw length requires base of screw head to protrude above flat washer (if flat washer is used) a distance equal to or greater than the screw diameter. If screw length is inadequate, select longer screw. Select shortest screw which will protrude the required distance.

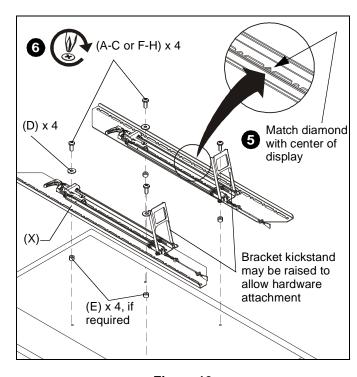


Figure 10

- Make sure diamond on interface brackets is even with center of display. (See Figure 10)
- Use selected screws (A-C or F-H), washers (D, if using screws A, B or C) and spacers (E), if necessary, to connect interface brackets (X) to back of display. (See Figure 10)

ADDING DISPLAYS TO MOUNTS

- Raise display with attached interface brackets and hook top of brackets into top of mount. (See Figure 11)
- Slowly bring bottom of display in towards mount until it clicks into place.
- 3. Repeat Steps 1 and 2 for remaining mounts in that row.

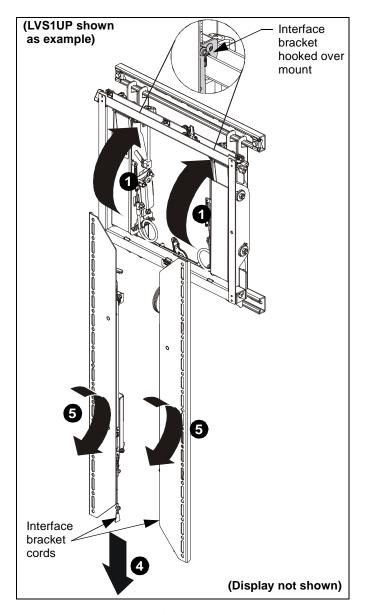


Figure 11

- The displays can be easily removed by pulling both interface bracket cords down. (See Figure 11)
- 5. Pull the bottom of the display out.
- Lift up display to lift hooks off the mount.

ADJUSTMENTS

NOTE: The following steps are also referenced on the next page (See Figure 16) and the PowerZone Adjustment guide (Z).

 Place the level against the front of the display and use knob (#1 in Figure 16) to straighten the tilt. (See Figure 12)

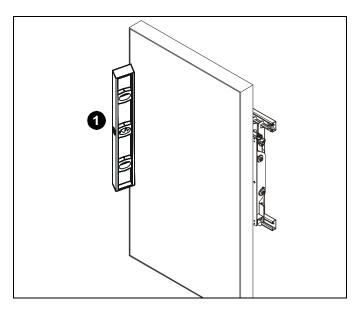


Figure 12

 Place a level on top of display and use the knobs at the top of the interface brackets (#2 in Figure 16), to raise/lower each side of display and level the display. (See Figure 13) and (See Figure 16)

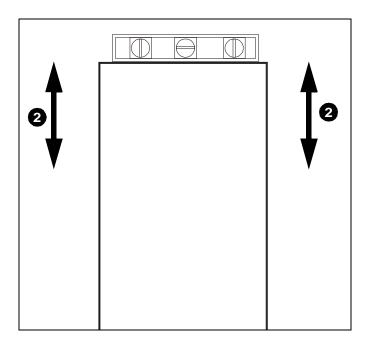


Figure 13

 Place level across face of adjoining screens and adjust depth (#3 in Figure 16) to make displays flush across the front of the video wall. (See Figure 14) and (See Figure 16)

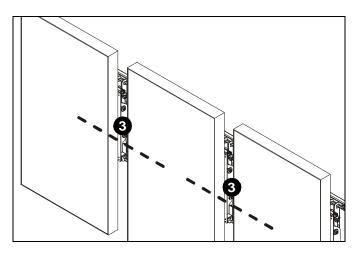


Figure 14

- Slide latch mechanism until tab sits flush against the interface bracket.
- Pull tab forward to lock latch mechanism to interface bracket. (See Figure 15)
- 6. Push latch down to engage the micro lateral adjustment knobs **(#4B and #4C)**. (See Figure 15) and (See Figure 16)
- Turn micro lateral adjustment knobs clockwise to move display toward knob end until displays are in correct position. (See Figure 16)

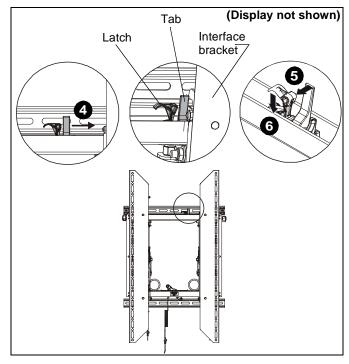


Figure 15

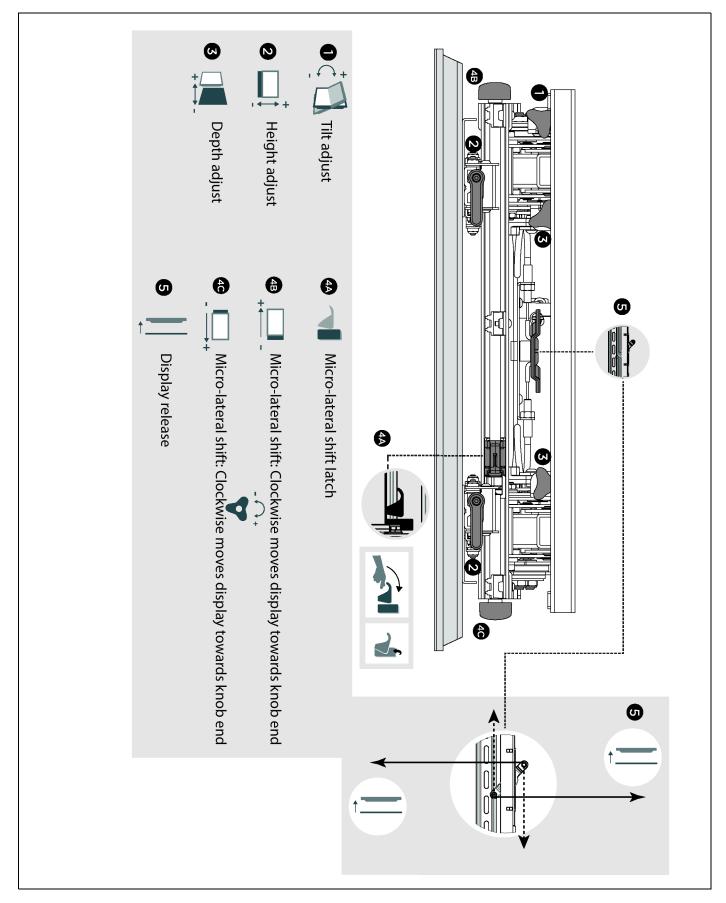


Figure 16

COMPLETING THE INSTALLATION

Cable Management Clips

- Place cable clip (Q) into rail/strut channel and turn 90° in either direction until cable clip is vertical. (See Figure 17)
- Route cables and RapidDraw release cords along rails/strut channels, through cable clips.
- Fasten cables and cords to cable clips (Q) using cable ties (P).

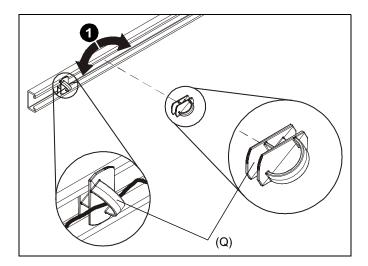


Figure 17

Security

The displays may be secured to the mounts by using a padlock (not included) through the bottom of the interface brackets. (See Figure 18)

NOTE: Padlock must have a 1/4" (6mm) shackle diameter.

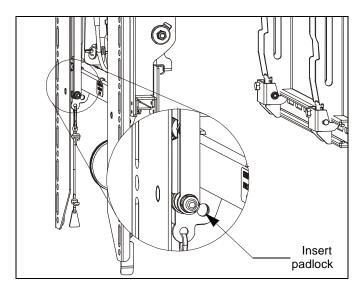


Figure 18

SERVICE

Extending and Retracting Mount

The mounts may be extended and retracted **only** in a service situation.

- To Extend Mount: Pull on the RapidDraw release cord designated for the specific mount.
- When the mount releases, carefully grasp bezel edges of display and pull out slowly, being careful to clear surrounding displays.
- To Retract Mount: Carefully push against display bezel edges, being careful to clear surrounding displays.
- 4. Push display against mount until it clicks into place.

Interface Bracket Kickstands

The interface brackets are equipped with kickstands which must **only** be used in a service situation.

- 1. Pull down on interface bracket release cords. (See Figure 19)
- 2. Pull out bottom of display.
- 3. Flip down the kickstands on both interface brackets, and prop against mount during service.

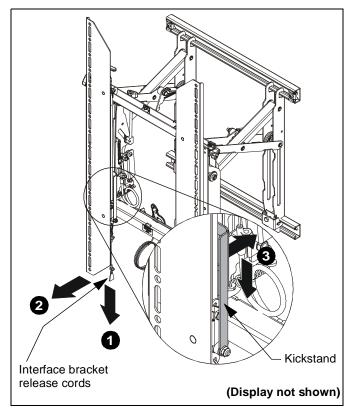


Figure 19

- 4. After service, hold display while flipping up both kickstands.
- Slowly bring bottom of display in towards mount until it clicks into place.

RapidDraw Display Release

The RapidDraw pull cord and display release allows easy service access to any specific display in the video wall.

Each mount ships with the pull cord installed. It is installed so that when pulled from **below** the mount or from the **right** of the mount it will release the display for service.

The following steps should be taken if an installation requires that the pull cord be accessible from the **left** of the display or **above** the display:

- 1. Unhook the pull cord from the mount. (See Figure 20)
- 2. Reinstall the pull cord in the opposite hole on the mount. (See Figure 20)

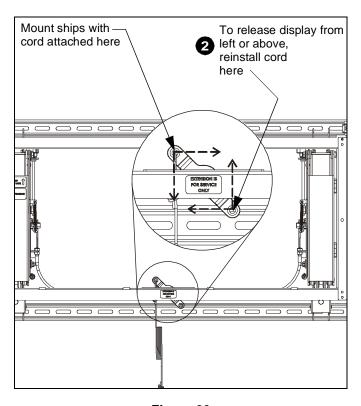


Figure 20

FASTENER INSTALLATION METHODS

IMPORTANT!: (See Table 2) for appropriate hardware and pilot hole sizes for various wall types.

Wood Stud

- Use one 5/16" x 2-1/2" lag bolt (L) through product and into pilot hole. (See Figure 21)
- 2. Repeat for remaining pilot holes.

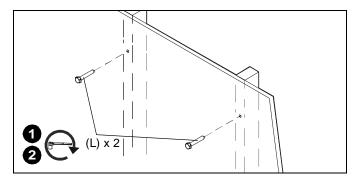


Figure 21

Concrete

- Install one UX10 x 60 anchor (J) into each pilot hole using a hammer, making sure that the anchor is flush with the wall. (See Figure 22)
- Use one 5/16" x 2-1/2" lag bolt (L) through product into each anchor in wall.

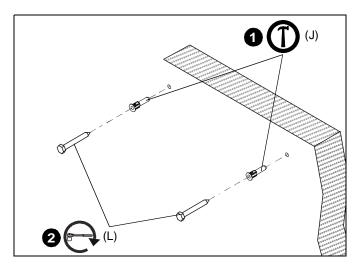


Figure 22

Plywood-Backed Steel Stud

1. Use one #14 x 1-1/2" hex-head washer slot head screw (N) and one 1/4" washer (M) through strut channel or rail. (See Figure 23)

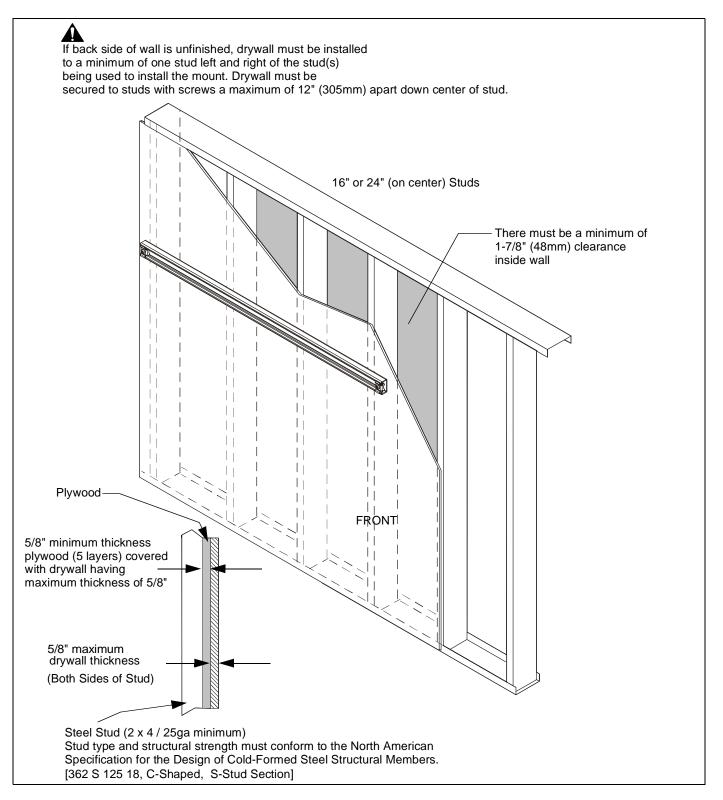


Figure 23



Chief, a products division of Milestone AV Technologies

8800-002634 Rev00 ©2014 Milestone AV Technologies www.chiefmfg.com 07/14

Europe

USA/International A 6436 City West Parkway, Eden Prairie, MN 55344

800.582.6480 / 952.225.6000 F 877.894.6918 / 952.894.6918

Franklinstraat 14, 6003 DK Weert, Netherlands

+31 (0) 495 580 852

+31 (0) 495 580 845

Asia Pacific A Office No. 918 on 9/F, Shatin Galleria

18-24 Shan Mei Street

Fotan, Shatin, Hong Kong

852 2145 4099

852 2145 4477

