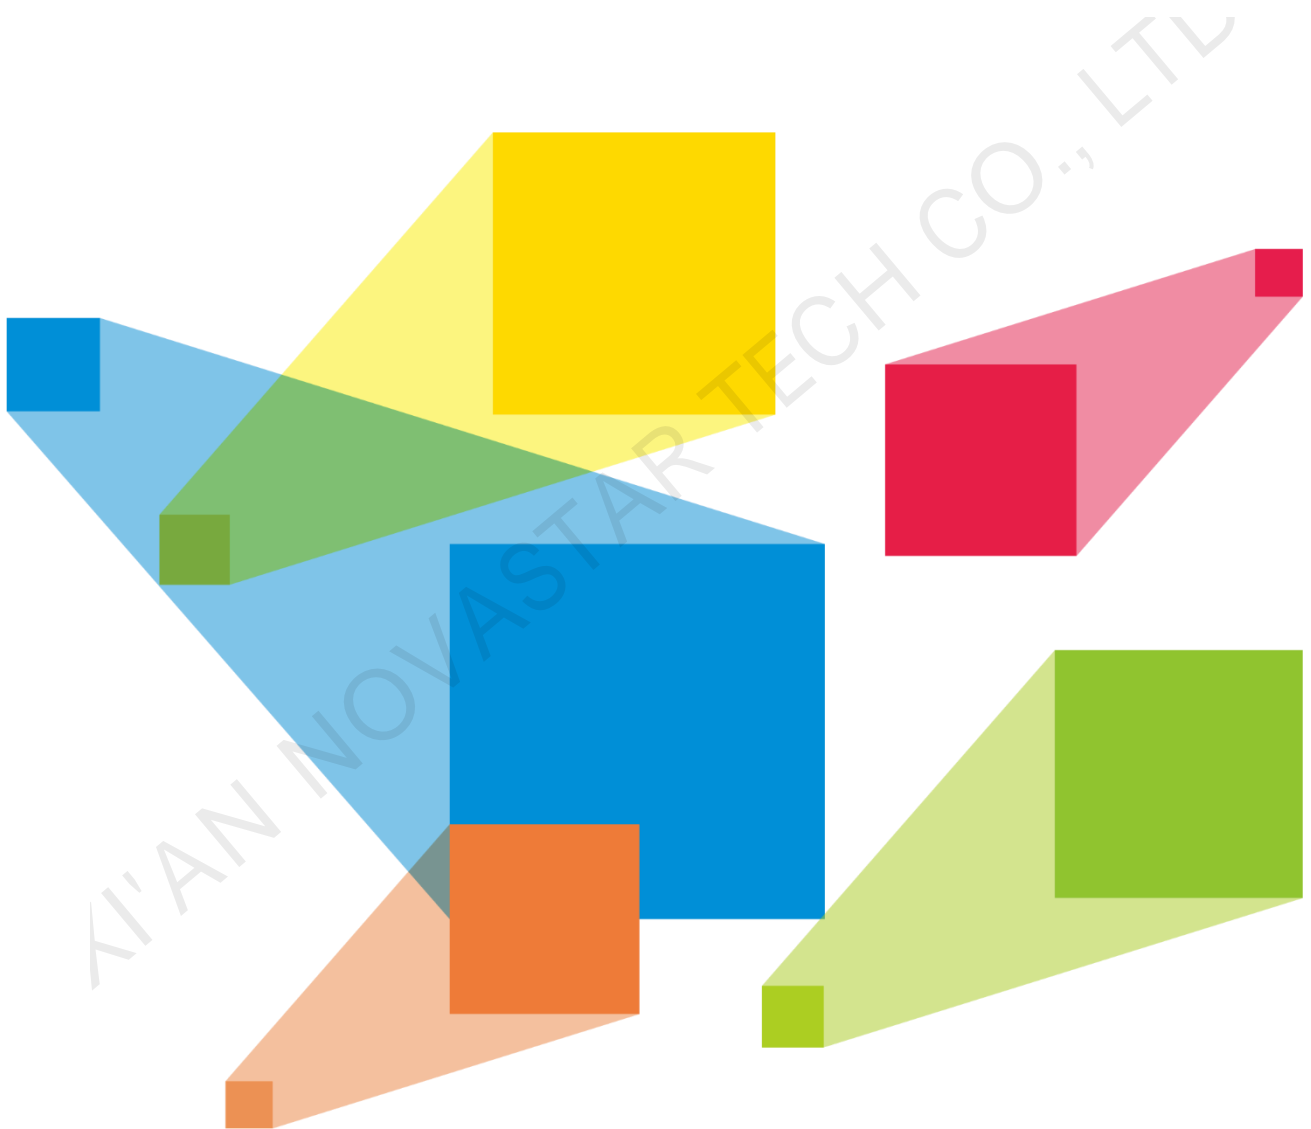# NovaPro UHD

All-in-One Controller

Specifications

Overview

The NovaPro UHD is a new all-in-one controller developed by NovaStar. Featuring video processing and control, and the built-in Master VI platform software, the NovaPro UHD allows you to easily manage layers and configure screens by using a mouse, keyboard and monitor.

The NovaPro UHD is capable of receiving a variety of video signals and processing images of resolutions up to Ultra HD 4K×2K@60Hz and 8K×1K@60Hz. It comes with a maximum loading capacity of 10,400,000 pixels and can send the processed videos to LED displays using Neutrik Ethernet ports and fiber optical ports.

Thanks to the powerful video processing and sending capabilities, the NovaPro UHD is widely used for high-end rental applications, stage control systems and fine-pitch fixed LED displays.

Features

- Industry-standard input connectors
  - 4x 12G-SDI (IN-LOOP)
  - 1x HDMI 2.0 (IN-LOOP)
  - 1x DP 1.2
  - 4x HDMI 1.3 (Purchase a DVI input card to replace the connectors.)
- 16x Neutrik Ethernet outputs and 4x OPT outputs
  - Two modes available on fiber optical output ports: copy and hot backup
  - The maximum loading capacity is 10,400,000 pixels. The maximum output width and height per unit reach up to 16,384 pixels 8192 pixels respectively.
- 6x layers
  - Up to 2x 4K×2K and 4x 2K×1K layers can be added, and layer scaling is available.
  - Flexible layer adjustment, including opacity, mask, overlapping, copying, mirroring, flipping, etc.
  - Irregular layer supported
  - Z-order sorting
- 1x OSD, 1x LOGO and 1x BKG
  - OSD supports cropping, opacity adjustment, dynamic and static images, and position settings.
 - LOGO supports resolutions up to 256×256 and allows for cropping, opacity adjustment and position settings.
  - BKG can be scaled to fit the screen automatically.
- Built-in Master VI platform software allowing for easier operations
- Working with the A8s or A10s Plus receiving card to support HDR function, making images smoother
- Low latency output

  The end-to-end delay can be as low as 1 frame when the low latency and synchronization functions are turned on and the data runs vertically on the screen.
- Multiviewer settings

  Monitor the input sources, PVW or PGM, or perform mixed monitoring.
- Web control

  Access and control the NovaPro UHD in real time by using a browser without the need to install multiple pieces of software.
- Up to four NovaPro UHD units can be linked together for image mosaic.
- Decimal frame rates supported

  The supported frame rates are 23.98 Hz, 29.97 Hz, 47.95 Hz, 59.94 Hz, 71.93 Hz, 119.88Hz and 143.86Hz.
- Genlock synchronization, fit for XR application scenarios
- PGM editing supported

Appearance

Front Panel

Button	Function
On/OFF button	Hold down the button for 3 seconds to power on, power off or restart the device.
Layer buttons	Open or close layers and display layer status. Status LEDs: ● On (blue): The layer is open and an input source is accessed. ● Flashing (blue): The layer is being edited and an input source is accessed. ● On (white): The layer is open, but no input source is accessed. ● Flashing (white): The layer is being edited, but no input source is accessed or the input source is abnormal. ● Off: The layer is closed.

Input source buttons	Quickly switch the layer input source and display the input source status.
	 Press an input source button to switch to the input source.
	 Status LEDs:
	 ● On (blue): The input source is accessed and being used by a layer.
	 ● On (white): The input source is accessed but not in use.
	 ● Off:
	    − The input source is not accessed or abnormal.
	    − The input source is not accessed but already used by a layer.

TFT screen	Display current device status, menus, submenus and messages.

Knob	● Rotate the knob to scroll through the menu items, or adjust a parameter value. ● Press the knob to confirm the selection or settings.
Function buttons	● 〔icon〕: Enter or exit the quick navigation screen. ● 〔FTB〕: Make the LED screen fade to black. ● 〔LOGO〕: Access the LOGO menu. ● 〔PRESET〕: Access the preset menu. ● 〔FREEZE〕: Freeze the output image. ● 〔OSD〕: Access the OSD menu. ● 〔FN〕: Custom function button ● 〔TEST〕: Access the test pattern menu. ● 〔BKG〕: Access the BKG settings menu. ● 〔TAKE〕: Send the PVW to PGM with a transition effect. ● 〔CUT〕: Send the PVW directly to PGM without a transition effect.
ESC button	Exit the current menu or cancel an operation.
USB ports	2x USB2.0 ● Connect to a mouse and keyboard to control the device with the built-in GUI. ● Insert a USB drive to update the system. ● Insert a USB drive to import or export files.

Note:

Hold down the knob and the ESC button simultaneously for 3 seconds or longer to lock or unlock the front panel buttons.

Rear Panel

Note:

The NovaPro UHD supports the replacement of the HDMI input card (standard configuration). You can buy a DVI input card to replace the HDMI input card.

| Input		
Connector	**Quantity**	**Description**
12G-SDI	4	● Supports ST-2082-1 (12G), ST-2081-1 (6G), ST-424 (3G) and ST-292 (HD). ● Up to 4K×2K@60Hz input resolution ● Connector 4 supports deinterlacing processing. ● Supports 12G-SDI output with loop-through. Note: When the input source is a 12G-SDI signal, a CANARE / L-4.5CHD+ / UHDTV-SDI SDI cable is required and it cannot be longer than 50 m.
DP 1.2	1	● Up to 4K×2K@60Hz (8K×1K@60Hz) input resolution ● HDCP 1.3 compliant ● Does not support interlaced input signals.
HDMI 2.0	1	● Up to 4K×2K@60Hz (8K×1K@60Hz) input resolution ● HDCP 1.4 and HDCP 2.2 compliant ● Does not support interlaced input signals. ● Supports HDMI 2.0 output with loop-through.
HDMI 1.3	4	● D_4×HDMI 1.3 input card (can be replaced by a D_4×DVI input card) ● Up to 1920×1080@60Hz input resolution for each connector ● HDCP 1.3 compliant ● Supports interlaced input signals.
Output		
Connector	**Quantity**	**Description**
Ethernet port	16	Neutrik Gigabit Ethernet outputs ● Max. loading capacity: 10.4 million pixels ● Max. width: 16,384 pixels ● Max. height: 8,192 pixels
OPT 1–4	4	10G fiber optical outputs (copy and hot backup)

		● OPT 1 transmits data on Ethernet ports 1–8.
		● OPT 2 transmits data on Ethernet ports 9–16.
		● OPT 3 is the copy/hot backup channel for OPT 1.
		● OPT 4 is the copy/hot backup channel for OPT 2.
MVR	1	HDMI 1.3 connector, used for Multiviewer to monitor input sources, PVM or PGM, or perform mixed monitoring
AUX	1	HDMI 1.3 connector, used for connecting to an auxiliary device such as a teleprompter

| Control		
Connector	**Quantity**	**Description**
ETHERNET	1	For PC communication or network connection

USB	3	● 1x USB 2.0 (Type-B): Connect to the PC for device debugging.
		● 2x USB 2.0 (Type-A):
		  - Insert a USB drive to update the system.
		  - Connect to a mouse and keyboard.
		  - Output port for linking another device unit

GENLOCK IN-LOOP	1	Connect to a synchronization signal source. ● IN: Accept the sync source. ● LOOP: Loop the sync source.
CONTROL UI	1	Connect to a monitor for displaying the user interface of the Master VI platform software.

Applications
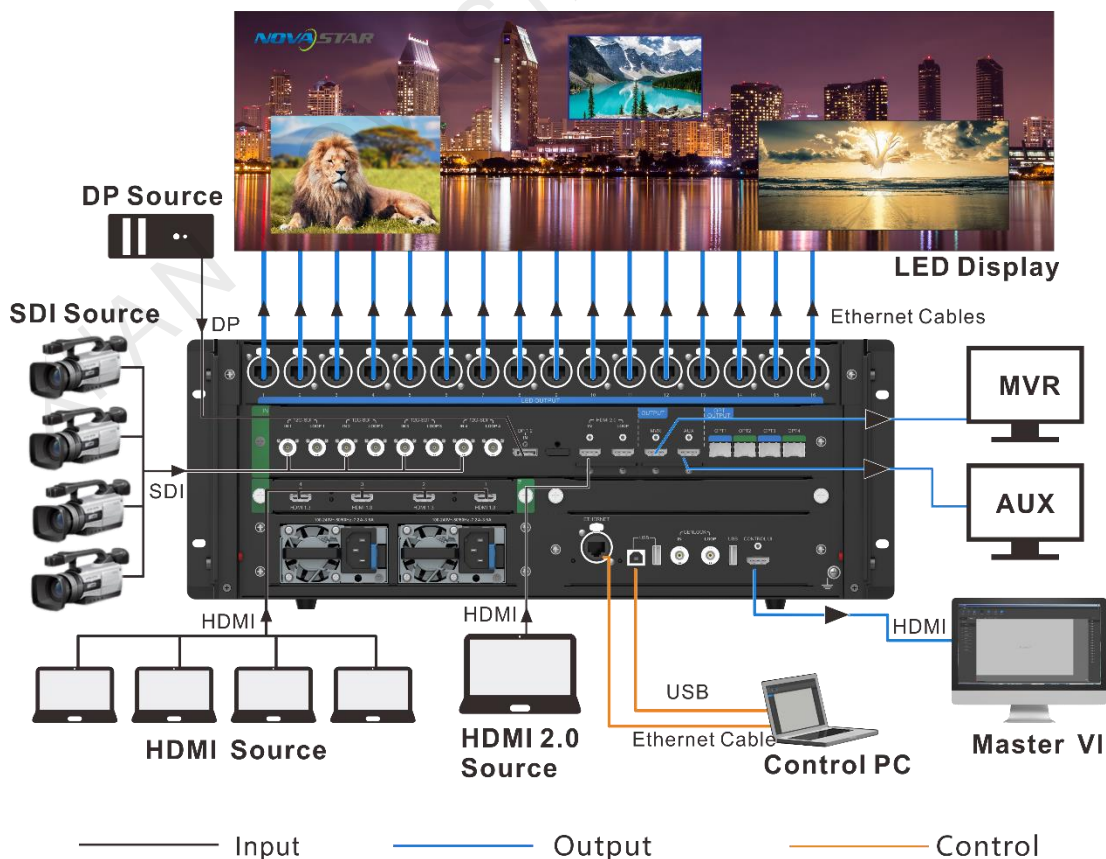
Dimensions

NovaPro UHD
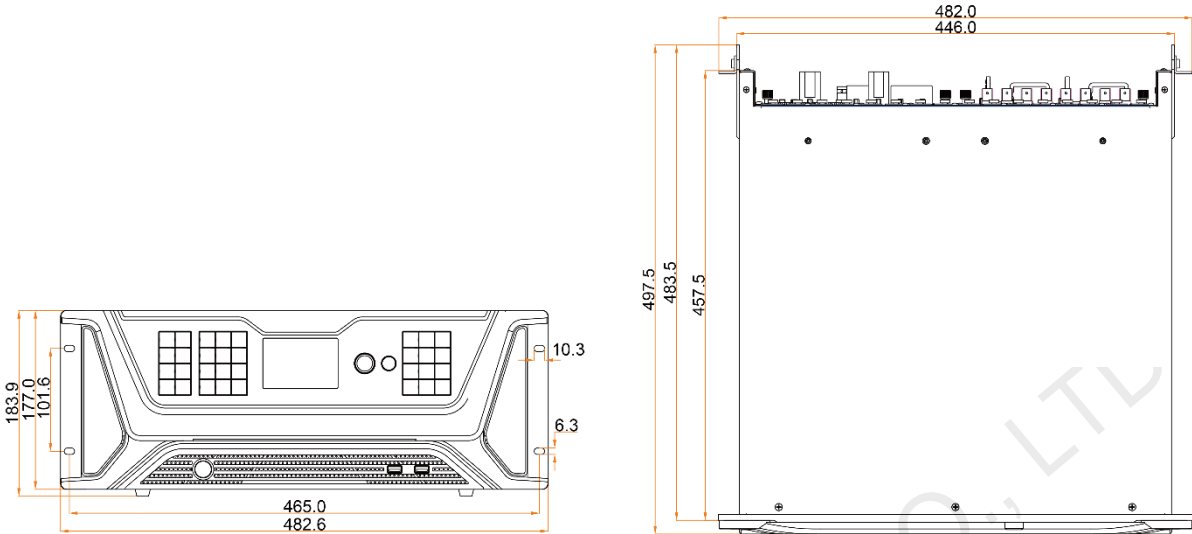
Tolerance: ±0.5   Unit: mm

Flight Case
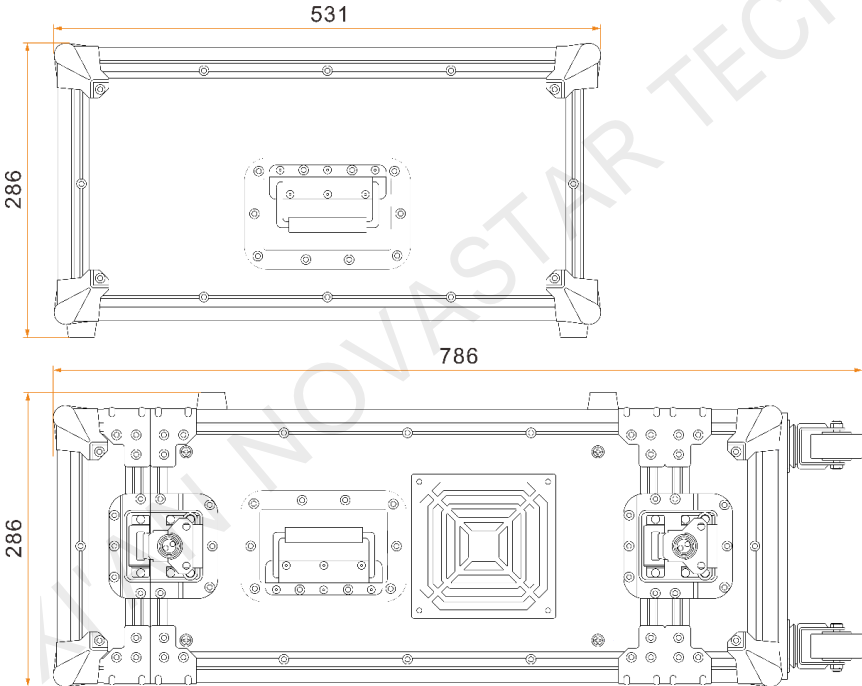
Tolerance: ±0.5   Unit: mm

Note:

If you need the detailed dimension drawings of the flight case, please contact the customer service of NovaStar.

Specifications

Overall Specifications		
Electrical Specifications	Power connectors	100–240V~, 50/60Hz, 7.2A–3.5A Dual redundant power supplies
	Rated power consumption	180 W
Operating Environment	Operating temperature	–10°C to +60°C
	Operating humidity	0% to 80%, non-condensing
Storage Environment	Storage humidity	0% to 95%, non-condensing
Physical Specifications	Dimensions	482.6 mm × 183.9 mm × 497.5 mm
	Net weight	21 kg
	Gross weight	42 kg
Packing Information	Accessories	● 2x Power cords ● 1x DVI cable ● 1x USB cable ● 1x Ethernet cable ● 1x HDMI cable ● 1x DP cable ● 1x Mini DP to DP cable ● 46x Silicone dustproof plugs ● 1x USB drive (16 GB) ● 1x Custom Letter ● 1x Quick Start Guide ● 1x Certificate of Approval ● 1x Safety Manual
	Flight case	531 mm × 286 mm × 786 mm
Certifications		FCC, IC, UL/CUL, CB, CE, RoHS 10, EAC, RCM, PSE
		Note: If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please apply for the certifications yourself or contact NovaStar to apply for them.
Noise Level (typical at 25°C/77°F)		57 dB (A)

Video Source Features

Input Connector	Bit Depth		Max. Input Resolution
● HDMI 2.0 ● DP 1.2	8-bit	RGB 4:4:4	4096×2160@60Hz 8192×1080@60Hz
		YCbCr 4:4:4	
		YCbCr 4:2:2	
		YCbCr 4:2:0	Not supported
	10-bit	RGB 4:4:4	4096×2160@30Hz 8192×1080@30Hz
		YCbCr 4:4:4	
		YCbCr 4:2:2	4096×2160@60Hz 8192×1080@60Hz
		YCbCr 4:2:0	Not supported
	12-bit	RGB 4:4:4	4096×2160@30Hz 8192×1080@30Hz
		YCbCr 4:4:4	
		YCbCr 4:2:2	4096×2160@60Hz 8192×1080@60Hz
		YCbCr 4:2:0	Not supported
HDMI 1.3	8-bit	RGB 4:4:4	1920×1080@60Hz
		YCbCr 4:4:4	
		YCbCr 4:2:2	
	10-bit	RGB 4:4:4	
		YCbCr 4:4:4	
		YCbCr 4:2:2	
	12-bit	RGB 4:4:4	
		YCbCr 4:4:4	
		YCbCr 4:2:2	
12G-SDI	● Max. input resolution: 4096×2160@60Hz ● Does not support input resolution and bit depth settings. ● Supports ST-2082-1 (12G), ST-2081-1 (6G), ST-424 (3G) and ST-292 (HD).		

Input and Output Resolutions

Input Resolutions						
Standard Resolution	**Standard Frame Rate (Hz)**	**SL-DVI**	**DL-DVI**	**HDMI 1.3**	**HDMI 2.0**	**DP 1.2**
1024×768	48/50/59.94/60/75/85	√	√	√	√	√
1280×720	23.98/24/25/29.97/30/48/50/59.94/60	√	√	√	√	√
1280×1024	48/50/59.94/60/75/85	√	√	√	√	√
1366×768	50/59.94/60	√	√	√	×	×
1440×900	60/75/85	√	√	√	√	√
1600×1200	48/50/59.94/60	√	√	√	√	√
1680×1050	60	√	√	√	√	√
1920×1080	23.98/24/25/29.97/30/48/50/59.94/60	√	√	√	√	√
1920×1200	50/59.94/60	√	√	√	√	√
2048×1080	30/48/50/59.94/60	√	√	√	√	√
2048×1152	30/60	√	√	√	√	√
2560×1080	50/59.94/60	×	√	×	√	√
2560×1600	50/59.94/60	×	√	×	√	√
2560×1600	120	×	×	×	√	√
3840×1080	30/50/59.94/60	×	√	×	√	√
3840×1080	120	×	×	×	√	√
3840×2160	30	×	√	×	√	√
3840×2160	60	×	×	×	√	√
1024×768	48/50/59.94/60/75/85	√	√	√	√	√
Output Frame Rates						
23.98Hz, 24Hz, 25Hz, 29.97Hz, 30Hz, 47.95Hz, 48Hz, 50Hz, 59.94Hz, 60Hz, 71.93Hz, 72Hz, 75Hz, 85Hz, 100Hz, 119.88Hz, 120Hz, 143.86Hz, 144Hz						

- √: The connector supports the resolution and frame rate.
- ×: The connector does not support the resolution and frame rate.
- Any input frame rate can be output at different frame rates.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Trademark

NOVASTAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website
www.novastar.tech

Technical support
support@novastar.tech